




Above: PT 11 Bean hung by a
bridle to the halyard.

The aft inwhale holes and the
bow breasthook hole are good
lifting points.

Depending on your bridle
design, the alignment holes at
the main bulkheads or the
oarlock sockets are also strong
lifting points.

A little trial and error at balancing
the boat when lifting will help
determine the lengths of the
webbing.

When lifting this way, always be
sure the connective hardware is
secure.

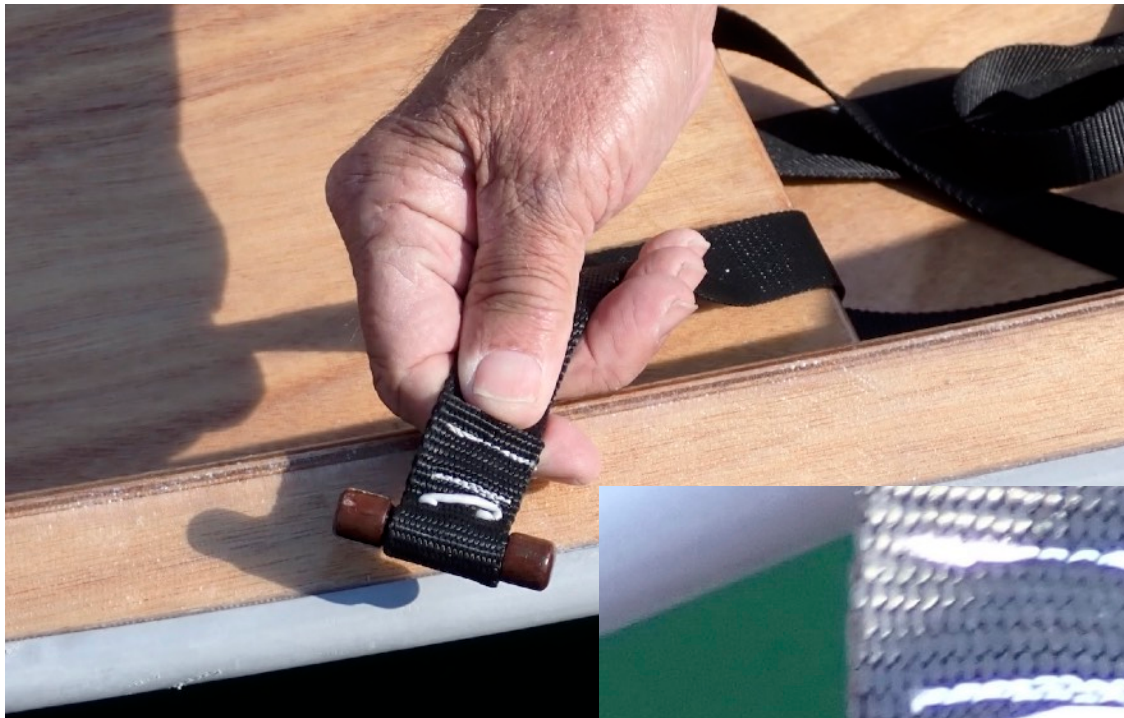

The beauty of Bean's
bridle is the simplicity.



For more, go to our blog and use the
search box for "davit" or "Lifting"

This method would work for the PT
SPEAR as well as the PT 11.